


Sennheiser G3 EW100

Scan For A Clear Frequency

1. Turn on both the transmitter & receiver
2. Briefly press **SET** on receiver to access menus. Using the arrow up and down keys on face of receiver search for **EASY SETUP**. Briefly press **SET**.
3. Using arrow up and down keys look for **SCAN NEW LIST**. Briefly press **SET**. The receiver will scan for open frequencies and create a bank listing the available frequencies, press **SET**. You are now at the first available frequency. Press **SET** to store. Use arrow up and down keys to find **EXIT**. Press **SET**. Search for **EXIT** again and press **SET**. Sync this frequency with transmitter (see next section)
4. For multiple systems repeat these 3 steps one system at a time.

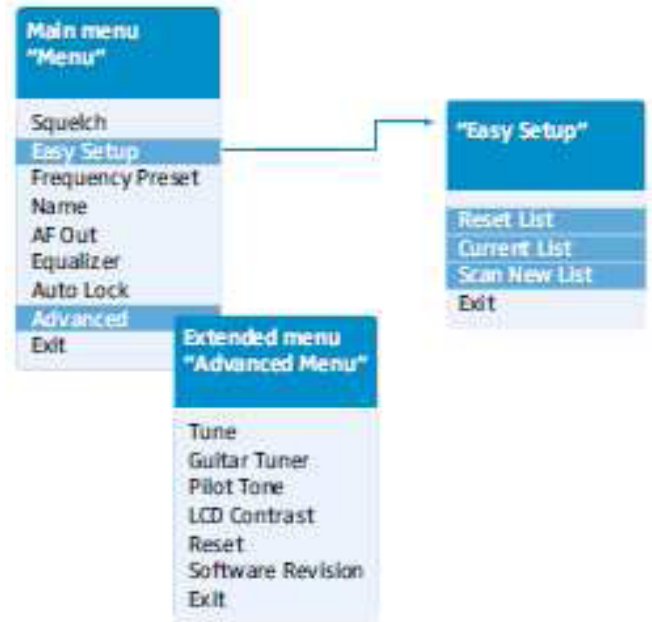

Synchronizing a Transmitter with a Receiver

1. Turn on both the transmitter & receiver.
2. Briefly press **SET** on receiver to access menus. Using the arrow up and down keys on face of receiver search for **SYNC**. Briefly press **SET**.
3. Hold the transmitter & receiver next to each other, with the infrared windows facing each other. When you see the "checkmark", they are synced.

